


# OX-03 Personal Oxygen Monitor

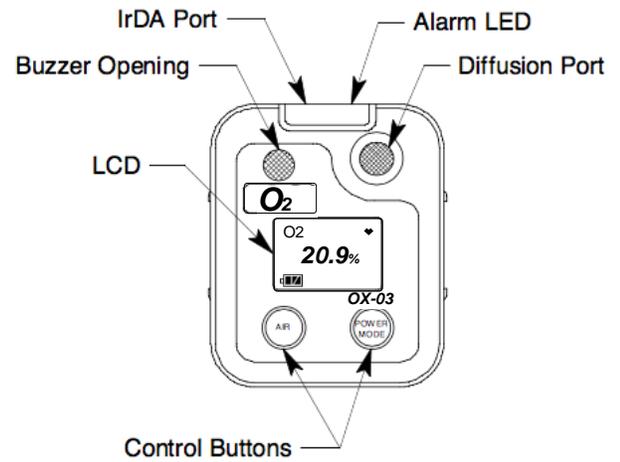


## Start-up Procedure

1. Press and briefly hold down the POWER MODE button. The backlight will turn on and all the display segments will turn on. Release the button when you hear a beep.

2. The vibrator vibrates and the alarm light flashes momentarily.

3. The instrument will then indicate the number of days before the next calibration is due.

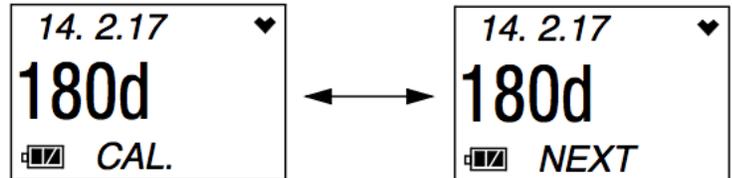


4. The instrument will cycle through several display screens showing its current settings and is complete when the instrument beeps twice.

5. The display shown is the current percent oxygen and MUST READ 20.9%. If the reading is something other than 20.9%, you MUST perform a Fresh Air Adjustment.


6. **REQUIRED** - To perform a Fresh Air Adjustment, find a fresh air environment that is of normal oxygen content and press the AIR button for 4 seconds, then release button. The adjustment will be complete and the display will be 20.9%.

## Start-up Problems

1. If the instrument indicates CAL, the instrument MUST BE RETURNED for calibration.

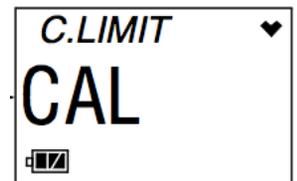

2. If the instrument indicates FAIL, the instrument MUST BE RETURNED for repair.

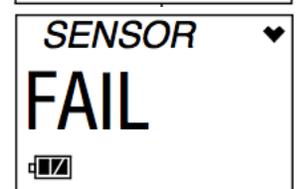

## Shutdown Procedure

1. **REQUIRED** - Press and hold down the POWER MODE button for 5 seconds. The instrument will turn off. This operation shall be performed after each use.